

## Headrest Rod Replacement

1. Remove three T20 screws securing the Headrest Cushion to the Headrest Shell.
2. Remove cushion from shell.
3. Slide the Headrest Shell to the highest position in the Moving Support.
4. Remove the two Allen screws on the bottom of the Headrest Rods.
5. Remove the two Barbed Fasteners from the top of the Headrest Rods.
6. Remove Headrest Shell.
7. Slide rods through the Moving Support until the tops are about 10mm into it and stop.
8. Push the new rods against the old rods and drive them through the Moving Support. \*\*\*\* They must be removed this way so as to keep the Spring Plunger from pushing through and jamming. \*\*\*\*
9. Re-assemble headrest in the reverse order of steps 6-1.
10. Enjoy Chair